



C1 Bel Canto Classic

Owner's handbook



Time on your side

Your C1 Bel Canto Classic watch has been designed in England and handbuilt in Switzerland by highly talented craftspeople. This ensures not only accurate and precise timekeeping, but also brings a real pride of ownership that only watches of the highest quality standards can hope to deliver.

You have made an investment, a good one, and the aim of this handbook is to help you make the most of that investment in what we hope will be a lifetime of ownership.

Mike France

CEO & co-founder



 **Christopher
Ward**



The features and technical details of your C1 Bel Canto Classic

- Swiss made mechanical movement with FS01 striking mechanism
- Brushed and polished Light-catcher™ case
- Anti-reflective domed box sapphire crystal
- Push-down crown with twin-flags motif
- Deep-stamped screwed caseback with sound wave motif
- On/off indicator operated via the 4 o'clock pusher
- Rhodium plated three-dimensional hand finished bridges and hammer mechanism
- Floating time display
- Mirror polished chime spring

 
Calibre:	Sellita SW200-1 b with FS01
Jewels:	32
Vibrations:	28,800 vph (4Hz)
Power reserve:	38-41 hours
Timing tolerance:	-5/+12 secs per day
Complication:	Automatic, Passing Strike
Material:	Grade 5 titanium
Diameter/Weight:	41mm: 52g
Height:	13.20mm
Water resistance:	3 ATM (30 meters)
Strap width:	22mm

Setting the time

Wind in a clockwise direction to re-power the watch.

Pull gently into position 1. For precise time setting it is recommended to pass beyond the desired minute and to set the hand backwards.

If you set the time by turning the hands backwards (anti-clockwise), the chime might not sound the first time. This is because the watch has a safety feature that can delay the chime when the hands are turned this way. Don't worry - it will work normally after that.

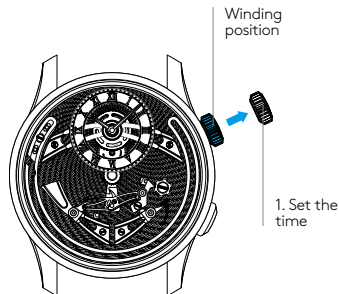

*The crown should sit flush to the case in order to maintain water resistance.

 
Operating the chime

Your C1 Bel Canto Classic will chime on the hour, every hour.

If you'd like to turn this feature off, press the pusher at the 4 o'clock position on the case.

The indicator on the dial will move from the chime position to the silent position.

When you want to hear the chime again, press the pusher once more and the indicator will move back to the original position.

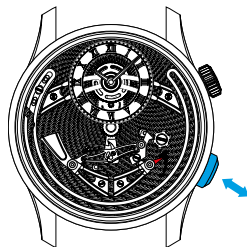

Chime on



Chime off



 
Changing your strap

- 1 Locate the quick-release pins on the underside of your case. Pinch the pins inwards to detach.


To reattach your strap or bracelet, pinch the pins inwards, and align the spring bars so they click securely into the lug holes on either side of the case.

- 2

Detaching and reattaching a strap

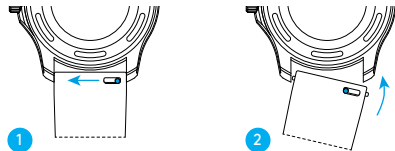


Detaching and reattaching a bracelet

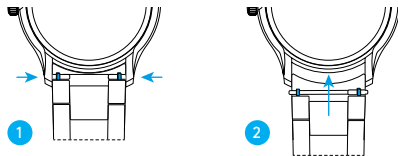 


Using the micro adjustment on your bracelet

 - 1 Press buttons to release.
- 2 Pull open the clasp.
- 3 There are five micro adjustment positions, which allows for a maximum extension of 10mm. To extend, pull the lever to unlock and simultaneously pull on the bracelet into the desired position.
- 4 To shorten, simply pull the lever to unlock and push the bracelet back into the clasp.



1

 

2



3



4

Your 60|60 Guarantee

Your Christopher Ward watch is covered by our industry-leading 60|60 Guarantee.

This means that you can return it 60 days after purchase and receive a full refund (as long as the watch is in perfect condition).

And if your watch develops a mechanical fault within five years (60 months), we'll repair it for free. Please use the warranty card to arrange this.

If you ever need to get hold of us we're at your service. And if you'd like to explore the CW world more, you can follow us on social media.



ChristopherWardLondon



@chriswardlondon