



C1 Bel Canto Lumière

Owner's handbook



Time on your side

Your C1 Bel Canto Lumière watch has been designed in England and handbuilt in Switzerland by highly talented craftspeople. This ensures not only accurate and precise timekeeping, but also brings a real pride of ownership that only watches of the highest quality standards can hope to deliver.

You have made an investment, a good one, and the aim of this handbook is to help you make the most of that investment in what we hope will be a lifetime of ownership.

Mike France

CEO & co-founder



 Christopher
Ward



The features and technical details of your C1 Bel Canto Lumière

- Swiss made
- Self-winding 29-jewel movement with in-house “FS01” module
- Brushed and polished Grade 5 titanium case with deep-stamped caseback
- Push-down crown featuring the twin-flag motif
- Anti-reflective domed sapphire crystal
- Smoked sapphire dial with floating Globolight® X1 GL Blue ring
- 3D hand-finished bridges, spring, and hammer mechanism
- Super-LumiNova® X1 applied to the module plate, hands, and On/Off indicator


Calibre:	Sellita SW200-1 with “FS01” module
Case:	Grade 5 Titanium
Diameter:	41mm
Height:	13.65mm
Case weight:	53g
Lug to lug:	48mm
Top sapphire:	3.93mm
Water resistance:	3 ATM (30m)
Vibrations:	28,800 p/hr (4Hz)
Timing tolerance:	-20/+20 sec/day
Power reserve:	38 - 41 hours
Jewels:	29
Strap width:	22 mm

Setting the time

Wind in a clockwise direction to re-power the watch.

Pull gently into position 2. For precise time setting it is recommended to pass beyond the desired minute and to set the hand backwards.

If you set the time by turning the hands backwards, the chime might not sound when the minute hand first passes twelve o'clock. This is due to a safety feature that can delay the chime in this direction. The chime will function normally the next time the minute hand passes twelve o'clock.

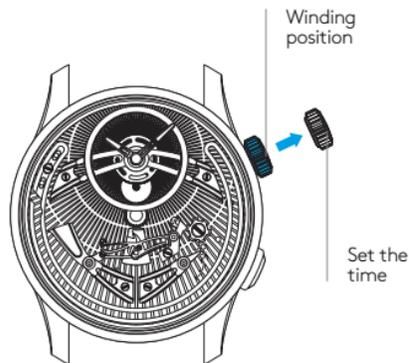

*The crown should sit flush to the case (position 1) in order to maintain water resistance.

Operating the chime

Your C1 Bel Canto Lumière will chime on the hour, every hour.

If you'd like to turn this feature off, press the pusher at the 4 o'clock position on the case.

The indicator on the dial will move from the chime position to the silent position.

When you want to hear the chime again, press the pusher once more and the indicator will move back to the original position.



Chime on




Chime off


Changing your strap

- 1 Locate the quick-release pins on the underside of your case. Pinch the pins inwards to detach.
- 2 To reattach your strap or bracelet, pinch the pins inwards, and align the spring bars so they click securely into the lug holes on either side of the strap or bracelet.

Detaching and reattaching a strap




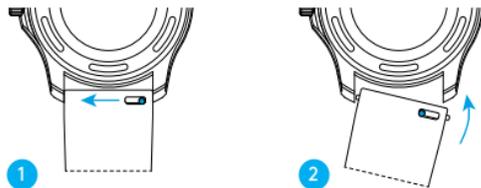


Detaching and reattaching a bracelet

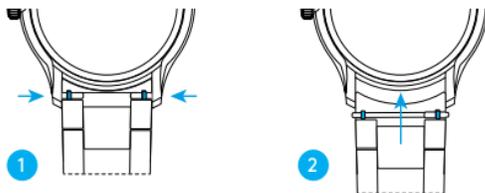


Using the micro adjustment on your Bader bracelet

- 1 Press buttons to release.
- 2 Pull open the clasp.
- 3 There are three micro adjustment positions, which allows for a maximum extension of 6mm. To extend, pull the lever to unlock and simultaneously pull on the bracelet into the desired position.
- 4 To shorten, simply pull the lever to unlock and push the bracelet back into the clasp.

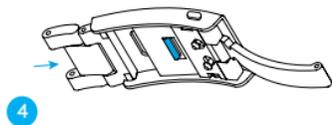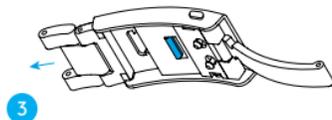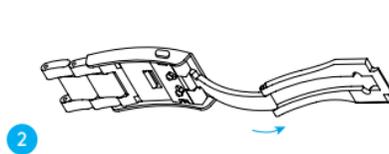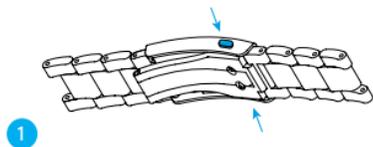

Using the micro adjustment on your Consort bracelet

- 1 Locate the micro-adjust links positioned closest to the clasp.
- 2 To extend the micro-adjust links, pull the bracelet away from the clasp.
- 3 To shorten the micro-adjust links, push the bracelet back towards the clasp.

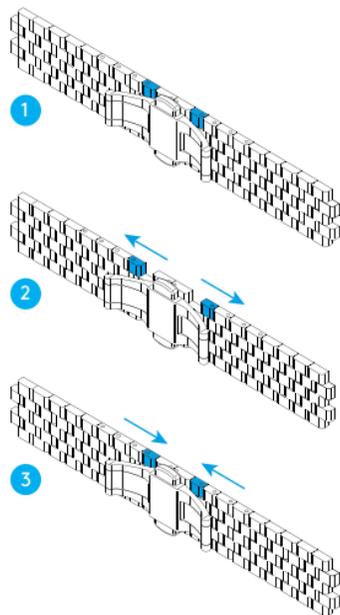

Servicing your watch

Our approach to service is about uncompromised quality and great value for money. The process, led by our expert technicians, won't cost the earth and will have the watch back on your wrist in reasonable time. We recommend you service your watch every three to four years to keep it in peak condition.





Your Christopher Ward watch is covered by our 60|60 Guarantee.

This means that you can return it 60 days after purchase and receive a full refund (as long as the watch is in perfect condition).

And if your watch develops a mechanical fault within five years (60 months), we'll repair it for free. Please use the warranty card opposite to arrange this.

If you ever need to get hold of us we're at your service. And if you'd like to explore the CW world more, you can follow us on social media.

 ChristopherWardLondon  @chriswardlondon