



C63 Sealander Chronograph

Owner's handbook

Time on your side

Your C63 Sealander Chronograph watch has been designed in England and handbuilt in Switzerland by highly talented craftspeople. This ensures not only accurate and precise timekeeping, but also brings a real pride of ownership that only watches of the highest quality standards can hope to deliver.

You have made an investment, a good one, and the aim of this handbook is to help you make the most of that investment in what we hope will be a lifetime of ownership.

Mike France
CEO & co-founder

Mike

 **Christopher
Ward**



The features and technical details of your C63 Sealander Chronograph


- Swiss made mechanical chronograph movement
- Elaboré-grade Colimaçoné movement finishing
- Central chronograph seconds hand with 30-minute counter at 3 o'clock, 12-hour counter at 6 o'clock and small seconds at 9 o'clock
- Brushed and polished Light-catcher™ case
- Matt black ceramic bezel with tachymeter scale
- Anti-reflective sapphire crystal
- Tapered, embossed screw-down crown and exhibition caseback
- High-gloss lacquer dial with black opalin sub-dials
- Diamond-polished applied indexes and hands with Super-LumiNova®
- iLink™ bracelet with “no tool” removable links, an engraved micro-adjustable clasp and quick-release system

Calibre:	Sellita SW510
Jewels:	27
Vibrations:	28,800 vph (4Hz)
Power reserve:	56-62 hours
Timing tolerance:	-5/+12 secs per day
Complication:	Automatic, Chronograph
Case material:	Stainless steel/Ceramic
Diameter/Weight:	41mm: 84g
Height:	13.9mm
Lume:	Super-LumiNova® Grade X1 C1 BL
Water resistance:	10 ATM (100 metres)
Strap width:	22mm

Setting the time

Unscrew the crown* anti-clockwise from the case to position 1 for winding in power. Wind in a clockwise direction to re-power the watch.

Pull gently into position 2. This position is used for handsetting and stopping of the seconds hand. For precise time setting it is recommended to pass beyond the desired minute and to set the hand backwards.

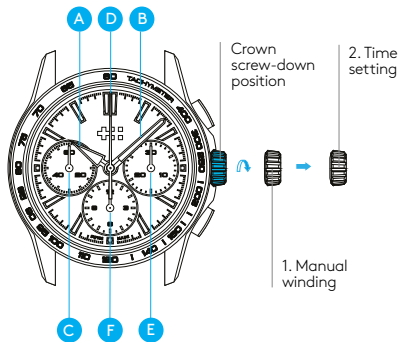

- A** Hour hand
- B** Minute hand
- C** Small second hand
- D** 60-seconds counter
- E** 30-minutes counter
- F** 12-hours counter

*The screw-down crown should sit flush to the case (closed position) in order to maintain water resistance.

Using the chronograph

START Press **A**

STOP Press **A**

Time readout on example

- 3 seconds
- 4 minutes
- 1 hour

RESTART Press **A**

STOP Press **A**

Time readout on example

- 8 seconds
- 10 minutes
- 3 hours

Resetting Chronograph hands




RESTART Press **A**

STOP Press **A**

RESET Press **B**

Time readout on example after reset

- 0 seconds
- 0 minutes
- 0 hours

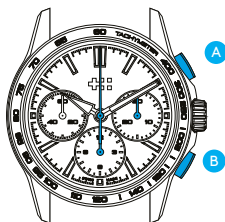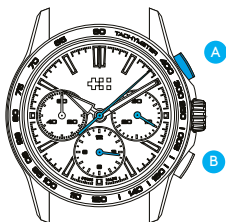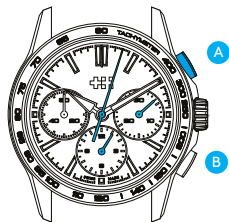





Changing your strap

- 1 Locate the quick-release pins on the underside of your case. Pinch the pins inwards to detach.
- 2 To reattach your strap or bracelet, pinch the pins inwards, and align the spring bars so they click securely into the lug holes on either side of the strap or bracelet.

Detaching and reattaching a strap

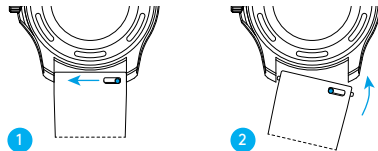


Detaching and reattaching a Bader bracelet

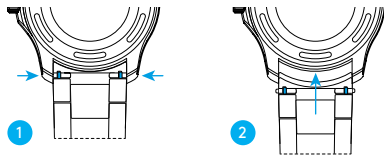


Using the micro adjustment on your bracelet

 - 1 Press buttons to release.
- 2 Pull open the clasp.
- 3 There are three micro adjustment positions, which allows for a maximum extension of 6mm. To extend, push the button to unlock and simultaneously pull on the bracelet into the desired position.
- 4 To shorten, simply push the button and then slide the bracelet back into the clasp.



1

 

2



3




4

Using the iLink™ system on your bracelet

- 1 To carry out the adjustment, firstly take your bracelet off the head (using quick release) and lay it down flat. To release the top piece, pinch it between thumb and forefinger, using your thumbnail to press down on the button and pull upwards, then slide the bottom piece (arrow side) downwards out of the mid-link. The buttons are small and may require a pointed object (e.g. a toothpick) for easier operation. Avoid using metal objects, as they may scratch the surface.
- 2 Repeat on the adjacent button link, then slide out and remove the mid-link.
- 3 To reconnect, slide the bottom piece pins back through the remaining mid-link (align the arrow with the button). Then insert the top piece and press firmly until it clicks into place. Keep removed pieces safe for future adjustments.

Bader bracelet iLink™ system

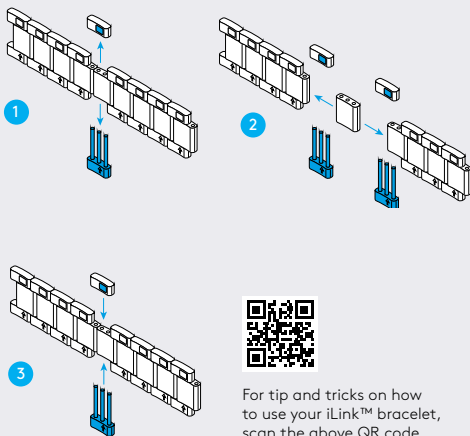

Servicing your watch

Our approach to service is about uncompromised quality and great value for money. The process, led by our expert technicians, won't cost the earth and will have the watch back on your wrist in reasonable time. We recommend you service your watch every three to four years to keep it in peak condition.





Your Christopher Ward watch is covered by our 60|60 Guarantee.

This means that you can return it 60 days after purchase and receive a full refund (as long as the watch is in perfect condition).

And if your watch develops a mechanical fault within five years (60 months), we'll repair it for free. Please use the warranty card opposite to arrange this.

If you ever need to get hold of us we're at your service. And if you'd like to explore the CW world more, you can follow us on social media.



ChristopherWardLondon



@chriswardlondon