C1 Loco Classic

Owner's handbook

Time on your side

Your C1 Loco Classic has been designed in England and handbuilt in Switzerland by highly talented craftspeople. This ensures not only accurate and precise timekeeping, but also brings a real pride of ownership that only watches of the highest quality standards can hope to deliver.

You have made an investment, a good one, and the aim of this handbook is to help you make the most of that investment in what we hope will be a lifetime of ownership.

Mike France
CEO & co-founder

Mike

Christopher Ward

The features and technical details of your C1 Loco Classic

— Swiss made mechanical in-house Calibre CW-003
— Dial-side view of the exposed free-sprung balance and escapement
— Brushed and polished 904L stainless steel case
— Anti-reflective front and rear sapphire crystal
— Embossed crown and exhibition caseback
— Light sandblasted movement dial
— Ceramic time display dial featuring a Roman numeral chapter ring
— Diamond polished hands
— iLink™ bracelet with "no tool" removable links, an engraved micro-adjustable clasp and quick-release system

Calibre:	Calibre CW-003
Jewels:	29
Frequency:	28,800 vph (4Hz)
Power reserve:	144 hours
Timing tolerance :	-0/+7 secs per day
Complication:	Manual, Open Balance
Material:	904L stainless steel
Diameter/Weight:	41mm: 64g
Height:	14.10mm
Water resistance :	3 ATM (30 meters)
Strap width:	22mm

Setting the time

For winding, keep the crown in position 1, then turn the crown in a clockwise direction to power the watch.

To wind the movement from empty to full power turn the crown fully 95 times.

When fully wound, your C1 Loco has a maximum power reserve of 144 hours.

Pull the crown gently into Position 2. This position is used for handsetting.

For precise time setting, we recommend passing beyond the desired minute and setting the hand backwards.

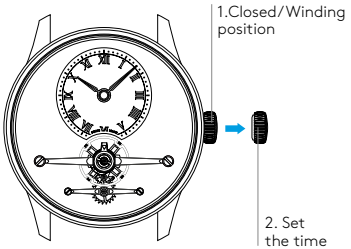

*The screw-down crown should sit flush to the case in order to maintain water resistance.

Changing your strap

1. Locate the quick-release pins on the underside of your case. Pinch the pins inwards to detach.
2. To reattach your strap or bracelet, pinch the pins inwards, and align the spring bars so they click securely into the lug holes on either side of the strap or bracelet.

Detaching and reattaching a strap

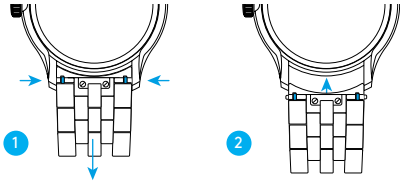

Detaching and reattaching a bracelet

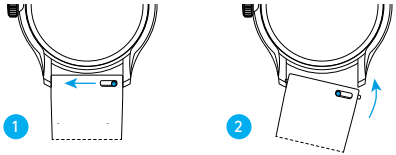

Using the micro adjustment on your Consort bracelet

1. Ensure butterfly clasp is closed.

2. Pull firmly on either side of the bracelet to open micro adjust.

   There is two 1.5mm micro adjust positions on either side of the butterfly clasp allowing for a maximum extension of 3mm. To extend simply pull gently on one, or both sides of the bracelet clasp depending on the desired amount of extension.

3. To shorten simply push the bracelet back towards the clasp.

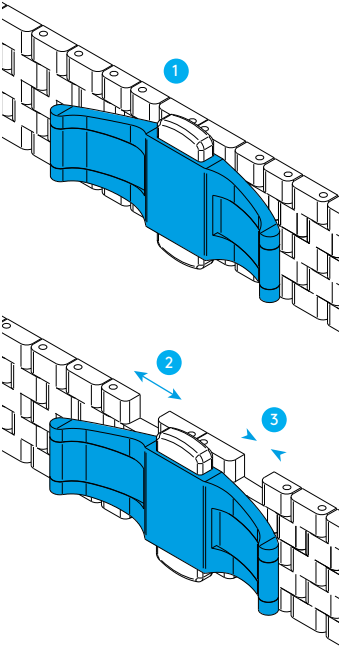

Using the iLink™ system on your bracelet

1. To carry out the adjustment, firstly take your bracelet off the head (using quick release) and lay it down flat. To release the top piece, pinch it between thumb and forefinger, using your thumbnail to press down on the button and pull upwards, then slide the bottom piece (arrow side) downwards out of the mid-link. The buttons are small and may require a pointed object (e.g. a toothpick) for easier operation. Avoid using metal objects, as they may scratch the surface.

2. Repeat on the adjacent button link, then slide out and remove the mid-link.

3. To reconnect, slide the bottom piece pins back through the remaining mid-link (align the arrow with the button). Then insert the top piece and press firmly until it clicks into place. Keep removed pieces safe for future adjustments.

Consort bracelet iLink™ system

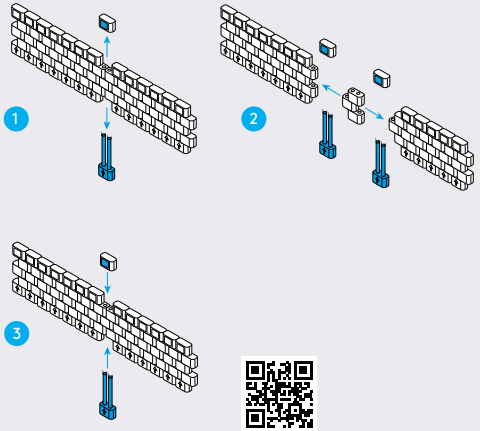

For tip and tricks on how to use your iLink™ bracelet, scan the above QR code.

Servicing your watch

Our approach to service is about uncompromised quality and great value for money. The process, led by our expert technicians, won't cost the earth and will have the watch back on your wrist in reasonable time. We recommend you service your watch every three to four years to keep it in peak condition.

Christopher Ward

Your 60|60 Guarantee

Your Christopher Ward watch is covered by our industry-leading 60|60 Guarantee.

This means that you can return it 60 days after purchase and receive a full refund (as long as the watch is in perfect condition).

And if your watch develops a mechanical fault within five years (60 months), we'll repair it for free. Please use the warranty card opposite to arrange this.

If you ever need to get hold of us we're at your service. And if you'd like to explore the CW world more, you can follow us on social media.

ChristopherWardLondon @chriswardlondon