C1 Bel Canto Negroni

Owner's handbook

Time on your side

Your C1 Bel Canto Negroni watch has been designed in England and handbuilt in Switzerland by highly talented craftspeople. This ensures not only accurate and precise timekeeping, but also brings a real pride of ownership that only watches of the highest quality standards can hope to deliver.

You have made an investment, a good one, and the aim of this handbook is to help you make the most of that investment in what we hope will be a lifetime of ownership.

Mike France
CEO & co-founder

Mike

Christopher Ward

The features and technical details of your C1 Bel Canto Negroni

— Swiss made
— Self-winding movement with FS01 striking mechanism
— Floating time display
— Brushed and polished Grade 5 Titanium Light-catcher™ case
— Anti-reflective domed box sapphire crystal
— Push-down crown with twin-flags motif
— Mirror polished chiming gong
— Rhodium plated three-dimensional hand finished bridges and hammer mechanism
— On/off pusher at 4 o'clock
— On/off indicator
— Deep-stamped screwed caseback with sound wave motif

Calibre:	Sellita SW200 with FS01
Jewels:	29
Vibrations:	28,800 vph (4Hz)
Power reserve:	34-38 hours
Timing tolerance:	-20/+20 seconds per day
Complication:	Passing Strike
Material:	Grade 5 titanium
Diameter/Weight:	41mm:53g
Height:	13.20mm
Water resistance:	3 ATM (30 meters)
Strap width:	22mm

Setting the time

Wind in a clockwise direction to re-power the watch.

Pull gently into position 2. For precise time setting it is recommended to pass beyond the desired minute and to set the hand backwards.

If you set the time by turning the hands backwards (anti-clockwise), the chime might not sound the first time. This is because the watch has a safety feature that can delay the chime when the hands are turned this way. Don't worry - it will work normally after that.

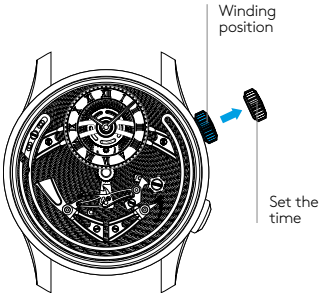

*The crown should sit flush to the case (position 1) in order to maintain water resistance.

Operating the chime

Your C1 Bel Canto Classic will chime on the hour, every hour.

If you'd like to turn this feature off, press the pusher at the 4 o'clock position on the case.

The indicator on the dial will move from the chime position to the silent position.

When you want to hear the chime again, press the pusher once more and the indicator will move back to the original position.

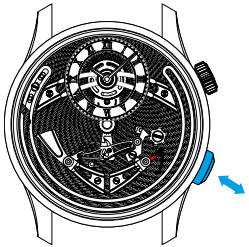

Chime on

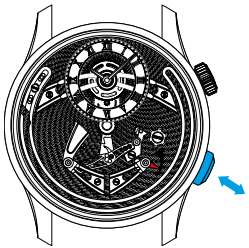

Chime off

Changing your strap

1. Locate the quick-release pins on the underside of your case. Pinch the pins inwards to detach.
2. To reattach your strap or bracelet, pinch the pins inwards, and align the spring bars so they click securely into the lug holes on either side of the strap or bracelet.

Detaching and reattaching a strap

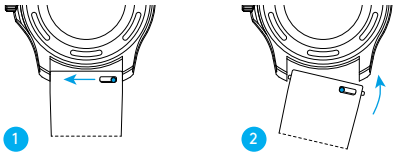

Detaching and reattaching a bracelet

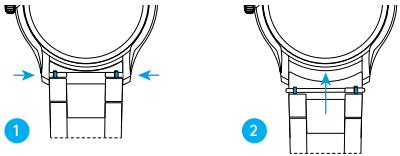

Using the micro adjustment on your bracelet

1. Press buttons to release.
2. Pull open the clasp.
3. There are three micro adjustment positions, which allows for a maximum extension of 6mm. To extend, push the button to unlock and simultaneously pull on the bracelet into the desired position.
4. To shorten, simply push the button and then slide the bracelet back into the clasp.

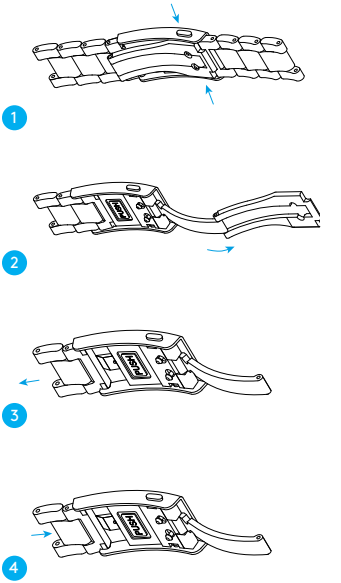

Christopher Ward

Your 60|60 Guarantee

Your Christopher Ward watch is covered by our industry-leading 60|60 Guarantee.

This means that you can return it 60 days after purchase and receive a full refund (as long as the watch is in perfect condition).

And if your watch develops a mechanical fault within five years (60 months), we'll repair it for free. Please use the warranty card opposite to arrange this.

If you ever need to get hold of us we're at your service. And if you'd like to explore the CW world more, you can follow us on social media.

ChristopherWardLondon @chriswardlondon