

C4 PEREGRINE CHRONOGRAPH

OWNER'S HANDBOOK

CHR. WARD
L O N D O N

TIME ON YOUR SIDE...

Your Christopher Ward watch has been designed and engineered by highly talented craftspeople to ensure not only accurate and precise timekeeping but also to bring a real pride of ownership that only luxury items of the highest quality can ever hope to deliver.

You have made an investment, a good one, and the aim of this handbook is to help you make the most of that investment during what I hope will be a lifetime of ownership.

A handwritten signature in black ink, appearing to read 'Chris', written in a fluid, cursive style.

Christopher Ward

THE CW360 WATCH CARE PROGRAMME

Your C4 Peregrine chronograph is constructed from the finest components and materials available including one of Switzerland's finest quartz movements. As with all watches of this quality, with the right care and attention, your new Christopher Ward watch has the potential to become an heirloom piece giving further joy to future generations. It's for this reason we have created our industry leading approach to after-sales care which we term the CW360 Watch care Programme. It's designed to deliver you complete peace of mind and the best support possible throughout the lifetime of your ownership and has three key elements, namely:

1. 60 DAY **FREE** RETURNS

Our success depends on you being completely happy with your new Christopher Ward watch. If for any reason you aren't, you have up to **60 Days** to return your watch, **absolutely free of charge**, and receive a replacement or full refund by return - and without any quibbles from us!

2. **FREE** 5 YEAR MOVEMENT GUARANTEE

Your watch, at its heart, has a top quality precision engineered Swiss movement – so it's very unlikely to give you problems with the minimum amount of care and attention, including a regular service. We recommend you return your watch to us every 3/4 years for a service, so our expert technicians can keep your fine timepiece in the peak of condition. (We recommend that whenever your quartz battery needs changing you consider having the watch serviced at the same time to keep it in perfect working order.)

3. **SERVICING & REPAIRS...THE CHRISTOPHER WARD WAY...**

Our innovative approach to servicing and repairing your Christopher Ward watch means that having your watch serviced or repaired doesn't mean months of waiting followed by an exorbitant bill - which is pretty much the experience guaranteed by every other luxury watch brand. We have developed an easy, quick and affordable expert service and repairs programme that doesn't cost the earth and has your watch back where it belongs - on your wrist - in double-quick time.

Visit our website for more details about the CW360 Watch Care Programme.





And here's a few tips to help keep your watch working perfectly...

- Never change the date between the hours of 8pm and 2am – it's a little like changing gears without using the clutch – never a good idea.
- Thoroughly rinse your watch in fresh water after immersion in salt water.
- Always ensure the crown is fully tightened before use in water.
- Always adhere to the water resistance rating of your watch which you will find later in this handbook.
- Your watch is shock resistant to minor impacts but dropping from height onto a hard surface may damage the movement.

THE C4 PEREGRINE CHRONOGRAPH

FEATURES

9 jewel Swiss quartz movement

Multi-function chronograph (split minutes, seconds and 1/10 seconds)

12hr Alarm function

Uni-directional rotating bezel with integrated tachymeter

Date indicator

Convex sapphire crystal with anti-reflective coating

Screw-in crown and water resistant to 5 atm

Adjustable quick-release butterfly clasp

Surgical grade stainless steel case with unique serial number

SuperLuminova™ indices and hands

TECHNICAL DATA

Diameter: 42mm

Height: 13mm

Case: 316L Stainless steel

Calibre: ISA 8174-220

Battery type: 395 (9.5mm x 2.6mm / SR 927 SW)

Accuracy: +15 / -15 seconds per month

Magnetic resistance: 18.8 Oe

Strap: 22mm

DESCRIPTION OF THE DISPLAY AND CONTROL BUTTONS

DISPLAY ELEMENTS

Second Hand

Centre stop-second

Hour hand

Minute counter

Minute Hand

Push-button C (Alarm)

Alarm Hand

Day Indicator


Date Window

CONTROL BUTTONS

Push-button A


Crown

Push-button B

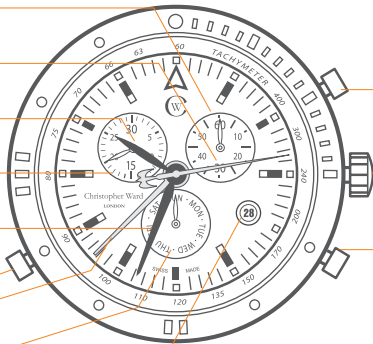


SETTING THE DAY

For a superior water resistance your crown is of the screw-in type. To get to position ① turn the crown anti-clockwise until it releases itself.

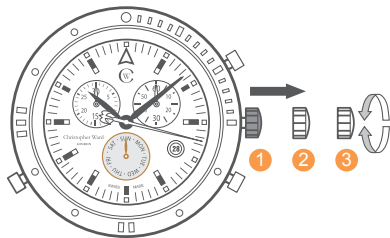

- Pull out the crown to position ③ (the watch stops)
- Turn the crown clockwise (or anti-clockwise) rotating the hands 24 hours until you reach the correct day e.g. **Wednesday**, then set the time taking into account am or pm
- Push the crown back into position ① and screw the crown in a clockwise direction in order to maintain water resistance. The crown should sit flush to the case

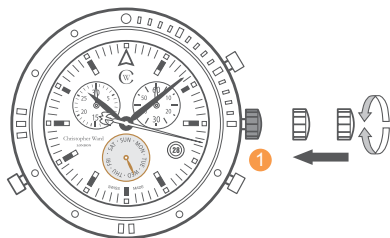

SETTING THE DATE (QUICK MODE)




- Pull out the crown to position **2** (the watch continues to run).
- Turn the crown clockwise until the correct date appears.
- Pull the crown to position **3**
- Push the crown back into position **1** until flush with the case and screw in.




Please note: The date can not be changed during the date changing phase between 20.00 hrs and 02.00 hrs as the watch gearing will already be aligning itself to change the date. The crown should always be screwed in after adjustment, and it is best to do so from position 3 to avoid advancing beyond the desired date.

SETTING THE TIME


For a superior water resistance your crown is of the screw-in type. To get to position ① turn the crown anti-clockwise until it releases itself.

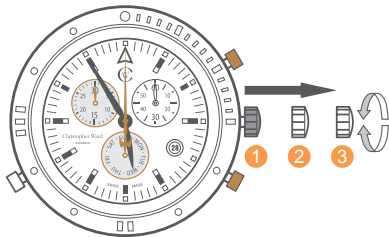

- Pull out the crown to position ③ (the watch stops).
- Turn the crown until you reach the correct time e.g. 08.45 hr.
- Push the crown back into position ① and screw the crown in a clockwise direction in order to maintain water resistance. The crown should sit flush to the case.

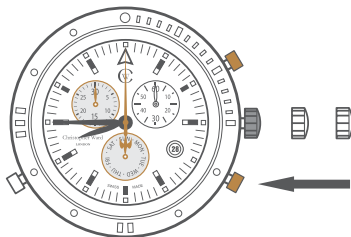

USING THE UNI-DIRECTIONAL BEZEL

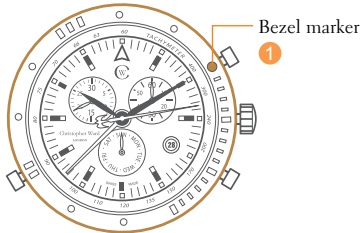

The bezel marker is by default at the 12.00 position. The first 15 minutes count down in minute intervals followed by 5 minute intervals.

The bezel, in this example shows the duration of time elapsed when using a parking meter.

- Move the bezel marker anti-clockwise so that it aligns with the current minute position **1**
- Now you can use the minute hand and the new bezel position to record the amount of time passed and calculate exactly how long remains. In this case 15 minutes has elapsed **2**



Example of use:

Measuring the time elapsed over a short period eg. parking meters, sports event, coffee breaks.


CHRONOGRAPH:

- The **minute counter** measures 30 minutes per rotation.
- The **centre stop-second** measures 60 seconds per rotation.

Display elements

Centre stop-second

Minute counter

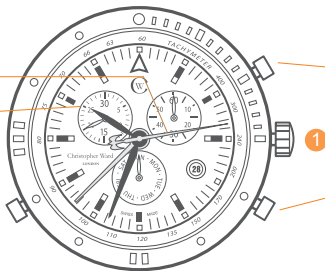

Control buttons

Push-button A
(Start / Stop)

Push-button B
(Reset)

Please note:

Before using the chronograph functions, please ensure that:

- The crown is in position **1** (screwed in).
- The 2 chronograph hands are precisely at zero position following activation of **push-button B**.
Should this not be the case, the positions of the hands must be adjusted (see the chapter entitled 'Adjusting the chronograph hands to zero position').

CHRONOGRAPH: BASIC FUNCTION

(Start / Stop / Reset)

Example:



1 Start: Press push-button A


2 Stop: to stop the timing, press push-button A once more and read the 2 chronograph counters: **5 min / 37.5 sec**

3 Zero positioning:
Press push-button B (The 2 chronograph hands will be reset to their zero positions).

Example of use:

Timing a runner over 100m

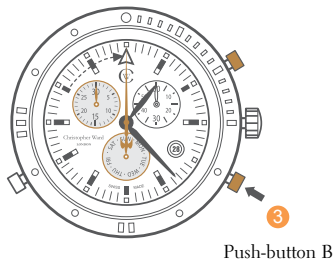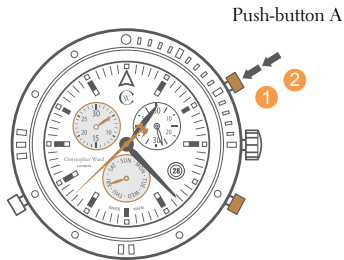

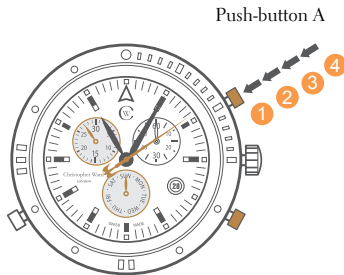

Push-button A



Push-button B

CHRONOGRAPH: ACCUMULATED TIMING

Example:

- 1 **Start:** (start timing).
- 2 **Stop:** (e.g. 15 min 5 sec following 1)
- 3 **Restart:** (timing is resumed).
- 4 **Stop:** (e.g. 13 min 5 sec following 3)
= 28 min 10 sec
(the accumulated measured time is shown)

- 5 **Reset:** The 2 chronograph hands are returned to their zero positions

- 6 **Repeat:** as necessary

Example of use:

Overall time to complete a journey less the coffee breaks



CHRONOGRAPH: INTERMEDIATE OR INTERVAL TIMING

Example:

1 **Start:** (start timing).

2 **Display interval:**

e.g. 10 minutes 10 seconds (timing continues in the background).

3 **Making up the measured time:**
(the 2 chronograph hands are quickly advanced to the ongoing measured time).

4* **Stop:** (final time is displayed).

5 **Reset:**

The 2 chronograph hands are returned to their zero positions.

Please note:

* Following 3, further intervals or intermediates can be displayed by pressing **push-button B**.


Example of use: 4 x 100m relay.

ADJUSTING CHRONOGRAPH HANDS TO ZERO POSITION

Example:

One or both chronograph hands are not in their correct zero positions and have to be adjusted (e.g. following a battery change).

- Unscrew crown and pull to position **2** to initialise chronograph reset.

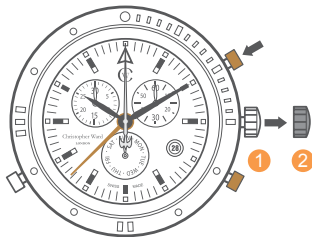


Adjusting the centre stop second

Single step A 1 x short

Continuous A long

When correct move to button B.

Corrective mode for the minute counter is now activated.

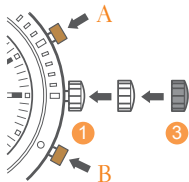

Adjusting the minute counter hand

Single step B 1 x short


Continuous B long

When correct pull the crown to position ③

Then return the crown to position ① ensuring that the crown is fully screwed in flush to the case to maintain water resistance.

Please note. Continuous use of the chronograph function will shorten battery life.

SETTING THE ALARM

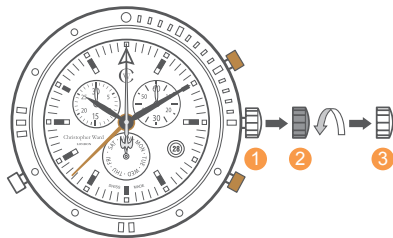


To set the alarm unscrew the crown and then pull to position ②

Rotate the crown anti-clockwise to move the alarm hand to the desired position taking note that the alarm function is 12 hours


After setting the alarm to the desired position pull the crown to position ③ and then return to position ① and screw in the crown flush with the case

RESET

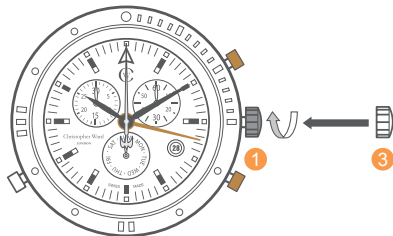

Please note.

Returning the crown from position ③ rather than position ② avoids the calendar advancing beyond the desired date

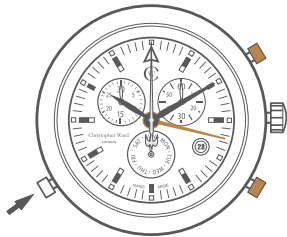

2 "BEEP" Alarm On
1 "BEEP" Alarm Off

Once the alarm hand is at the desired time setting, then the alarm can be activated by pressing the alarm command button at 08.00 hr.


2 beeps indicate the alarm is ON, 1 beep indicates the alarm is OFF.

USING THE TACHYMETRIC SCALE TO CALCULATE SPEED

Example: calculating the speed of a racecar over the course of a mile.

Record the time the racecar takes to cover a known distance of 1 mile.

Read off the speed on the tachymetric scale indicated by the central seconds hand. In this case, the racecar is travelling at 265mph.

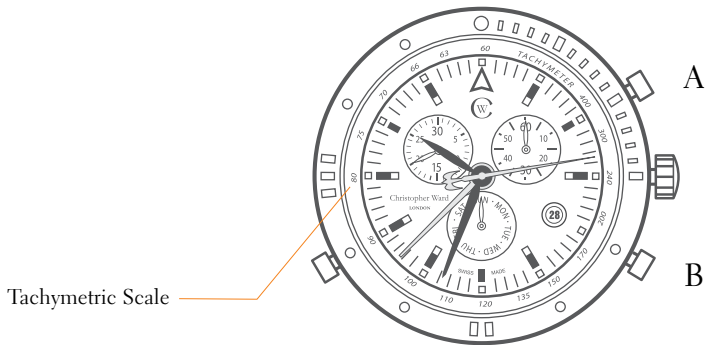



1 ATM (10 METRES)

Safe to wear your watch while washing your hands with tap water.



3 ATM (30 METRES)

Washing your car and/or general hosepipe usage.



5 ATM (50 METRES)

Water resistant to most household shower units.



10 ATM (100 METRES)

Safe to use while snorkelling in open water.



30 ATM (300 METRES)

Ideal for experienced divers and those practising scuba-diving.



50 ATM (500 METRES)

Professional divers, experiencing prolonged exposure underwater.



100 ATM (1000 METRES)

Professional deep sea diving.

WATER RESISTANCE

Although your watch has been through vigorous static pressure testing, it is worth remembering that there are many variables that can affect the water resistance of your watch.

For instance, arm movements during swimming and the sudden impact of diving and watersports will drastically increase the pressure the watch is under. Wearing your watch in the bath, shower, or sauna can also have an effect as a rapid increase in temperature can cause seals to expand and in extreme cases, malfunction or create condensation.

For these reasons, the water resistance rating of your watch (as shown) **should only ever be considered a guideline** and we strongly recommend they are always adhered to.

STRAPS & BRACELETS

As you would expect, we place as much emphasis on the quality of our straps and bracelets as we do our watches. We only use the finest leathers for our straps and our premium alligator straps are all ethically sourced from CITES approved farms in Louisiana. Similarly, we only use the finest metals in the construction of our bracelets, all of which are precision engineered for durability, efficiency and comfort.


The following guidelines explain how easy it is to use and adjust your Christopher Ward strap or bracelet:

LEATHER STRAP WITH EASY RELEASE BUTTERFLY CLASP



- Step 1 Locate the clasp
- Step 2 Press the quick-release
- Step 3 Pull open the clasp
- Step 4 Locate the opening
- Step 5 Thread strap through
- Step 6 Secure the strap
- Step 7 Close the clasp
- Step 8 Complete

BRACELET WITH MICRO-ADJUSTMENT

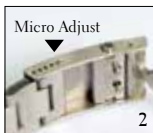

- Step 1 Press to release
- Step 2 Expand adjustment
- Step 3 Adjust pin position
- Step 4 Close the clasp

DIVER'S EXTENSION (WHERE APPLICABLE)



- Step 1 Press to release
- Step 2 Expand adjustment
- Step 3 Adjust pin position
- Step 4 Close the clasp

QUICK-RELEASE PINS (WHERE APPLICABLE)



- Step 1 Locate the release
- Step 2 Drag button back
- Step 3 Detach strap
- Step 4 Align holes to click a new strap in position

KEEPING IN TOUCH WITH CHRISTOPHER WARD...

From small beginnings just a few short years ago (our first workshop was actually a refurbished chicken shed!), Christopher Ward has won a worldwide following for his eponymous watch brand and can justifiably claim to manufacture the most affordable luxury watches in the world.

For many, the philosophy behind the brand, of trying to put luxury watches within the reach of everyone, is as attractive as the watches themselves, as is the very open approach of the business which means that Chris and the team spend a lot of time communicating personally with our customers - many of whom have become friends.

As the owner of a Christopher Ward watch, if ever you need to get hold of us we are at your service. We have listed some useful contact details on the back cover.

There is also always something new going on at our website at **www.christopherward.co.uk** and, if you haven't already discovered the independent forum dedicated to our brand at **www.christopherwardforum.com** we would recommend a visit. Informative and fun, it's a great place to hear the unexpurgated view of Christopher Ward of London!

CHR. WARD

L O N D O N

HEAD OFFICE

Christopher Ward (London) Limited, 1 Park Street, Maidenhead, Berkshire SL6 1SL United Kingdom
+44 (0)1628 763040

CUSTOMER SERVICES

+44 (0)844 875 1515 (United Kingdom) or 1.877.226.8224 (United States of America)
customerservices@christopherward.co.uk
technical@christopherward.co.uk

WEBSITE

www.christopherward.co.uk (United Kingdom)
www.christopherward-usa.com (United States of America)